

UT Health Science Center: RSP10 - Radioactive Waste Guidelines	
Version 1	Publication Date: 06/13/2022

No./Title: RSP10 - Radioactive Waste Guidelines	Resp. Office: Research Safety Affairs	Effective Date: 1/24/2021
Category: Radiation Safety	Last Review: 1/24/2020	Next Review: 1/24/2024
Contact: Jabari Robinson, Radiation Safety Officer, Office of Research Safety Affairs	☎ 901.448.6114	✉ radsafety@uthsc.edu

PURPOSE

To outline the guidelines for generating and packaging radioactive waste.

GENERAL

Radioactive waste is generated by various laboratory operations at UTHSC. This waste is collected in accumulation areas in each radioactive use laboratory. This document provides guidance for generators of radioactive waste with regards to proper packaging and waste minimization. Waste that has not been properly sorted and prepared will not be accepted for pickup. It is the responsibility of the Authorized User and associated lab staff to correct any issues with the radioactive waste stream as it exists in the laboratory.

MATERIALS

- Survey meter with appropriate probes (if applicable for isotope)
- PPE (gloves, lab coat, etc.....)
- Waste packaging materials (General Stores Number in Parenthesis)
 - Large clear plastic bags (GS # 161-436)
 - Small clear plastic bags (GS# 131-420)
 - Tape
- Yellow Cards
- Waste Tags
- Pen, calculator

FREQUENCY

The frequency may vary depending on the volume of use in each lab. Waste should be removed from laboratories in a timely fashion. Most laboratories are not authorized to store radioactive waste for decay.

UT Health Science Center: RSP10 - Radioactive Waste Guidelines	
Version 1	Publication Date: 06/13/2022

GUIDELINES

Waste Generation

- Determine if the waste is radioactive: Only radioactive materials should be placed into the radioactive waste stream.
- Characterize the waste: Waste must be sorted by type and isotope into waste streams. Determine which category the waste falls into:
- Determine which category the waste falls into:
 - Solid / Dry Waste – contaminated paper, plastic, tubes, stock vials, etc.... with no more than trace amounts of associated liquid.
 - Liquid Waste – Aqueous solutions containing radioactive materials. The liquid waste cannot contain hazardous materials. (See Mixed Waste).
 - Liquid Scintillation Vials (LSV) - liquid scintillation vials are used for counting wipe tests or samples. Flammable Solvents such as Xylene and Toluene based scintillation fluids should not be used (See Mixed Waste).
 - Regulated Vials – LSV’s that contain more than 0.05 uCi/ml of H-3 or C-14, or any other isotope.
 - Deregulated Vials – LSV’s that contain no radioactive material, or less than 0.05 uCi/ml of H-3 or C-14
 - Mixed Waste – Radioactive waste that is also chemically hazardous. Examples include: solutions which contain flammable solvents such as xylene, toluene or other hazardous chemicals combined with radioactive materials. (See the campus Safety Officer for more details).
 - Biohazardous Radioactive Waste – Radioactive waste that is also a biohazard. Examples include radioactive waste containing human materials. This waste must be treated, and the biohazard must be inactivated prior to transferring to Radiation Safety. See the campus Biosafety Officer for details).
 - Radioactive Animals – radioactive animal carcasses.
 - If the carcass does not contain greater than 0.05 uCi/g of H-3 or C-14 then it may be treated as non-radioactive; except for animals that are destined for human consumption. Records of transfer and disposal must still be maintained on the appropriate yellow cards; however, a waste tag is not required.
 - Sharps – sharp objects that have been contaminated with radioactive material. Examples include needles, scalpels, razor blades, Pasteur pipettes, and broken glassware.

UT Health Science Center: RSP10 - Radioactive Waste Guidelines	
Version 1	Publication Date: 06/13/2022

- Lead – Lead shielding or pigs may not be placed into radioactive waste containers. Clean lead should be put aside for pick-up and recycling. If you have contaminated lead, contact the Radiation Safety Department.
- Waste Accumulation – Radioactive waste must be accumulated according to the following guidelines:
 - Waste containers must be labeled (radiation symbol, isotope contained).
 - A record of waste disposal (waste tag) must be located on each container.
 - The use log on the back of the waste tag must be updated each day that waste is disposed in the container.
 - The front of the waste tag must be filled out completely prior to the waste being collected.
 - Containers must be lined with a thick clear plastic bag (see above).
 - Containers must be covered when not in use.
 - Containers should be made of impervious material (plastic, etc...) (cardboard is not appropriate)
 - Waste must be accumulated in a second clear plastic bag (see above).
 - “Radioactive” labels, stickers or tape must be defaced before they are placed in the waste container.
 - Stock vials should be completely defaced and placed into the dry radioactive waste stream.
 - Lead may not be disposed in the radioactive waste.
 - All waste must be segregated by type and isotope with the following exceptions:
 - 3H and 14C scintillation vials may be accumulated together.
 - Non-radioactive scintillation vials may be accumulated with exempt concentration scintillation vials.
 - Waste containers for ³²P, ¹²⁵I or similar isotopes must be shielded appropriately.
 - Wastes with potential volatile radioactive components should be accumulated in a fume hood.
 - Liquid scintillation waste containing volatile organic solvents must be stored in a fume hood.
 - Sharps MUST be accumulated in an appropriate container with a Radioactive Material label.
 - Aqueous liquid waste:
 - May be released to the sanitary sewer by sink disposal (see Sink Disposal) or
 - May be absorbed in plastic jugs (thereby turning it into dry/solid waste).
 - Animal carcasses or tissues should be double-bagged, frozen and stored in an impervious container until picked up.

UT Health Science Center: RSP10 - Radioactive Waste Guidelines	
Version 1	Publication Date: 06/13/2022

- Include the weight of the animal (grams) in addition to the activity contained.
- Sink Disposal – Aqueous radioactive waste may be released to the sanitary sewer by sink disposal if the following requirements are met.
 - The sink is posted and approved for disposal.
 - The daily disposal limit is not exceeded.
 - The waste is not hazardous (as determined by US EPA guidelines).
 - Any biohazards are inactivated prior to disposal.
 - The water should be run for several minutes before and after the disposal.
 - The sink and surrounding area must be surveyed appropriately when disposal is completed.

Packaging

Waste must be packaged in the specified clear plastic bags. The open top should be adequately sealed. A completed radioactive waste tag must then be affixed to the bag. Scintillation vial waste and animal carcasses must be double bagged.

Requesting a Waste Pick-Up

Requests for radioactive waste pick-ups should be sent to radsafety@uthsc.edu as this creates an electronic record of the request. Users should include the following information:

- Authorized User
- Waste Location
- Waste Description
 - Isotope(s)
 - Classification (dry/solid, LSV, etc....)
 - Volume (3 large bags, 55-gallon drum, etc....)

Collection and Transport

Radioactive waste is collected from the labs who have requested a pickup. Waste is then transported back to the central accumulation facility where it is segregated and packaged into drums pending disposal or on-site processing. Waste will not be collected if it does not meet the acceptance criteria. Any such deficiencies must be corrected by the laboratory.

If radioactive waste must be transported by laboratory staff, the following guidelines must be met:


- Waste must be placed into appropriate secondary containment.

UT Health Science Center: RSP10 - Radioactive Waste Guidelines	
Version 1	Publication Date: 06/13/2022

- Waste may not be transported by vehicle.
- All accumulation and packaging requirements specified above must be met.
- The waste may only be transported to:
 - A laboratory at UTHSC permitted for the use of radioactive materials and under the control of the same Authorized User who generated it.
 - Radiation Safety

UT Health Science Center: RSP10 - Radioactive Waste Guidelines	
Version 1	Publication Date: 06/13/2022

APPENDIX A – WASTE TAGS

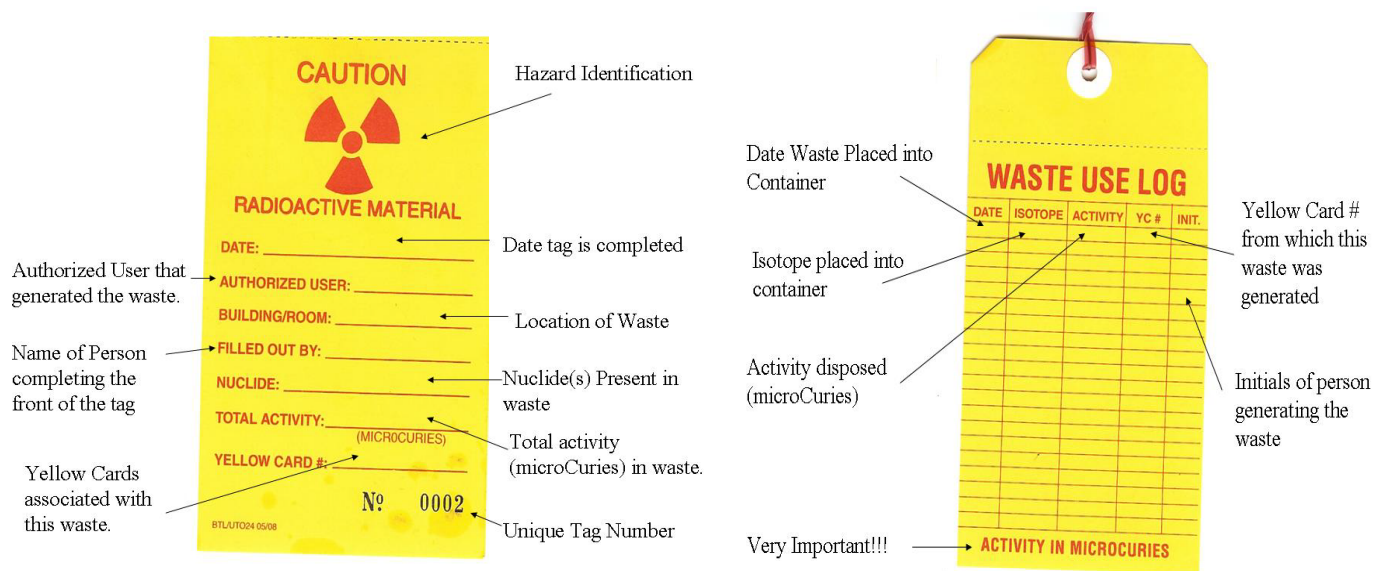

APPENDIX B – SINK DISPOSAL LIMITS

Isotope	Disposal Limit (uCi/day)	Allowable Concentration (uCi/ml)
³ H	500	1 E -2
¹⁴ C	500	6 E -2
³² P	10	9 E -5
³³ P	40	8 E -4
³⁵ S	50	1 E -3
¹²⁵ I	1	2 E -5
^{99m} Tc	500	1 E -2
⁶⁵ Zn	5	5 E -5
¹⁸ F	300	7 E -3

UT Health Science Center: RSP10 - Radioactive Waste Guidelines	
Version 1	Publication Date: 06/13/2022